

atranvelo™
cycleLAB

2D

Instruction manual

AtranVelo AB
Vinbergsvägen 4
311 50 Falkenberg
info@atranvelo.com

⚠ Warning ⚠

GB/USA: Read the safety instructions

DE: Lesen Sie die Sicherheitshinweise

NL: Lees de veiligheidsinstructies

FR: Lisez les consignes de sécurité

PL: Przeczytaj instrukcję bezpieczeństwa










FI: Lue turvallisuuohjeet








IT: Leggi le istruzioni di sicurezza

ES: Lea las instrucciones de seguridad

JP/日本語: 安全に関する注意事項をお読みください


25 kg
MAX LOAD

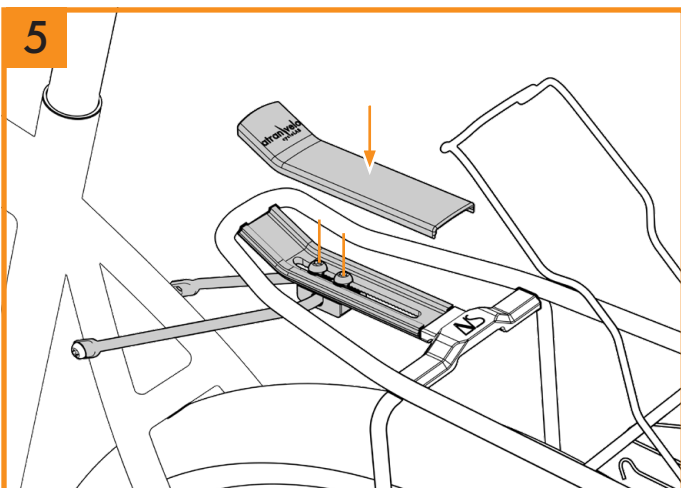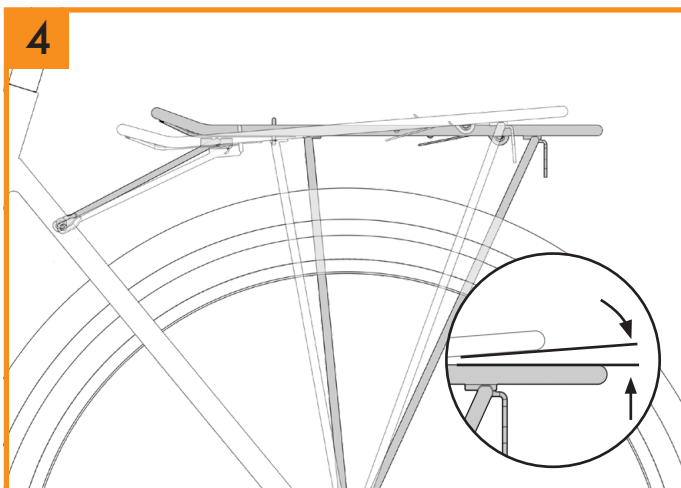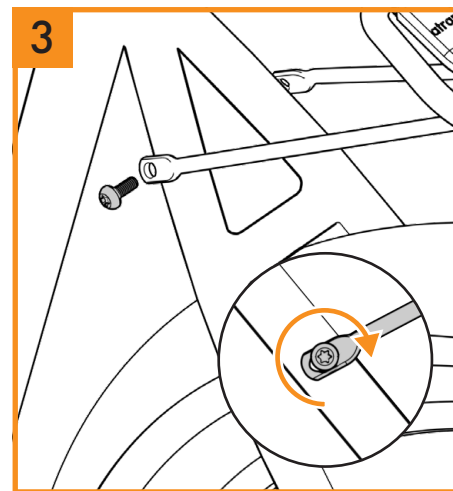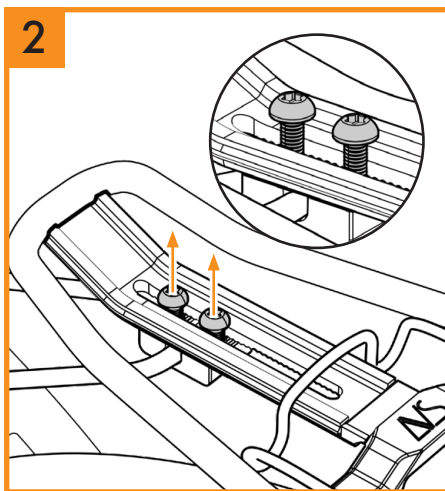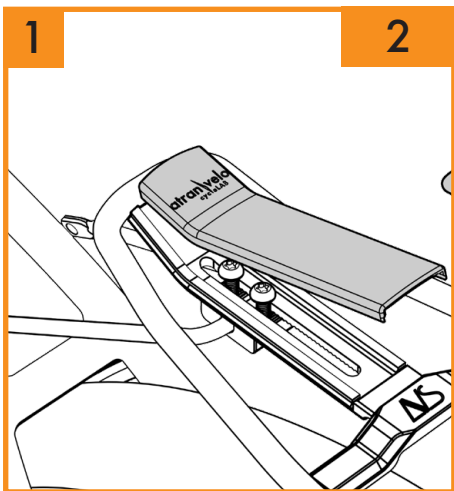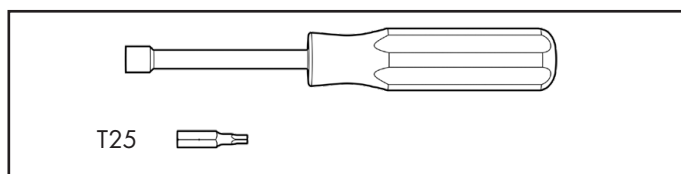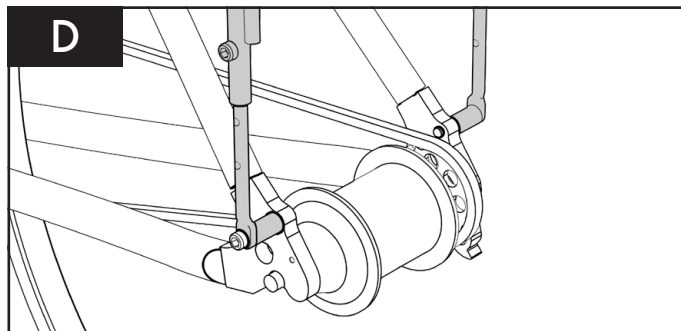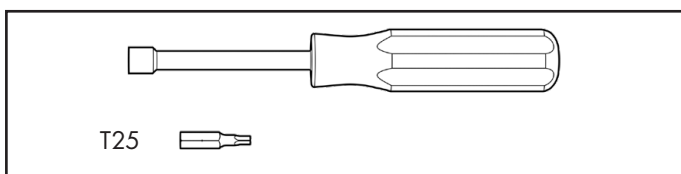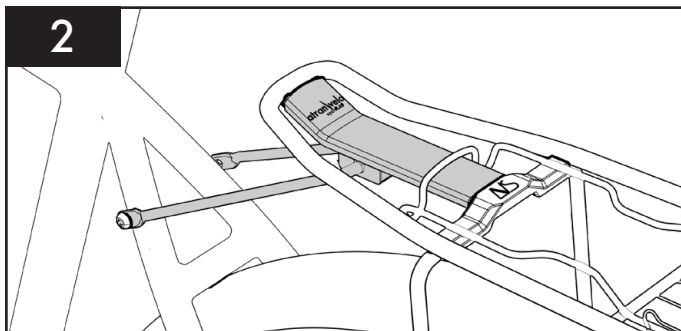

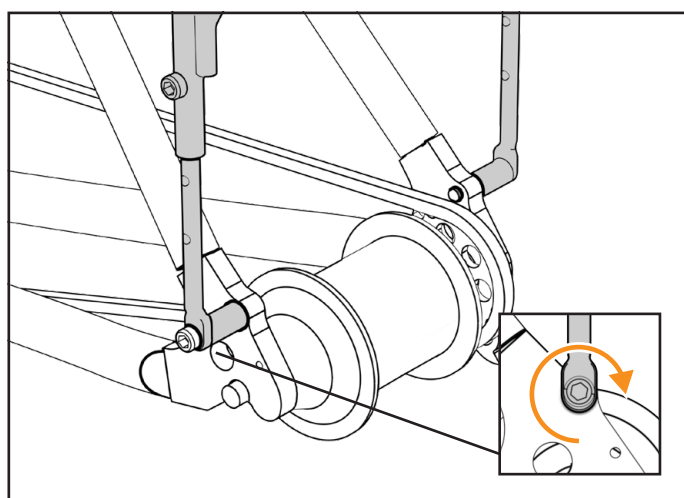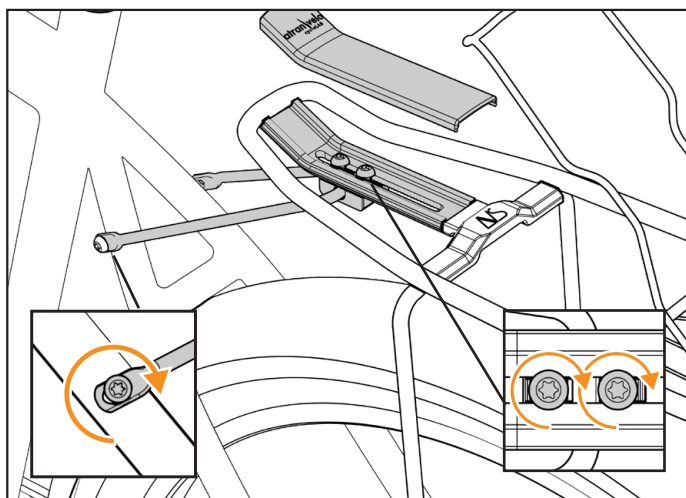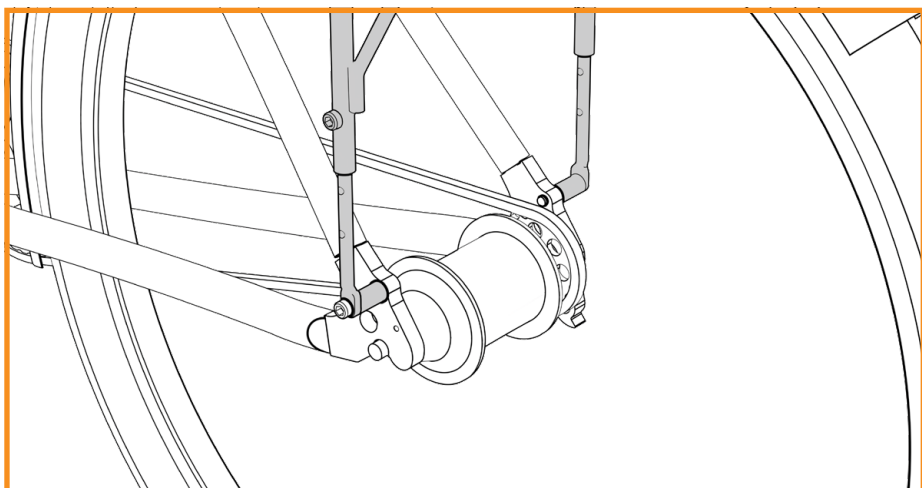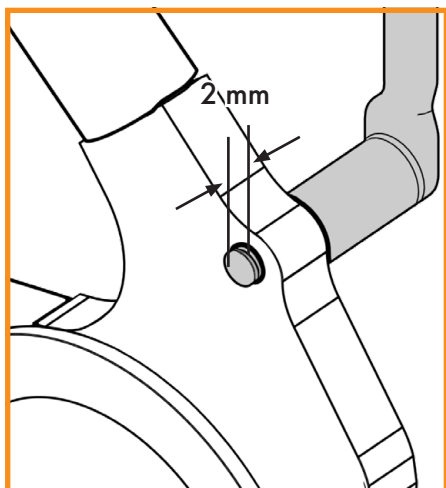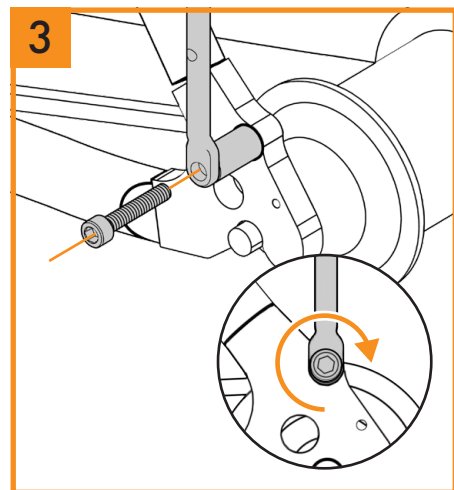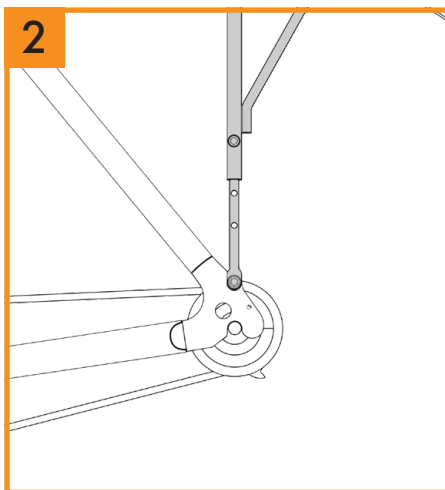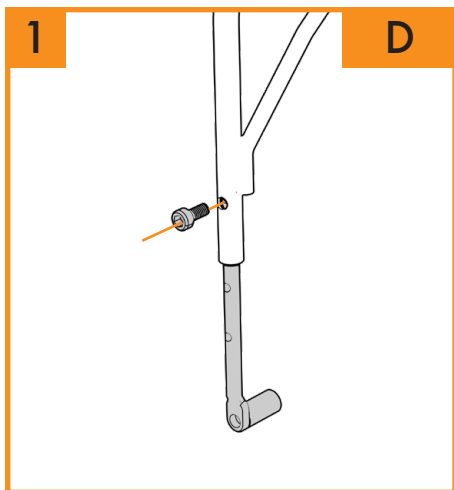

atran/velo[™]
cycleLAB

AtranVelo AB
Vinbergsvägen 4
311 50 Falkenberg
info@atranvelo.com